




## HOW TO ENTER THE IRIIDIUM SMS SERVICE CENTER NUMBER

**Before a subscriber can send an SMS message from the Iridium system, the Iridium SMS service center number must be stored on the SIM card.**

To store the Iridium Service Center Number

- a. Press the Envelope Key on the 9505 handset.
- b. Use the Scroll Key to select the 'Message Settings' option. Press OK.
- c. Use the Scroll Key to select the 'Service Centre' option. Press OK.
- d. Enter 00881662900005 or +881662900005. Press OK.
- e. The phone will momentarily display "Completed".

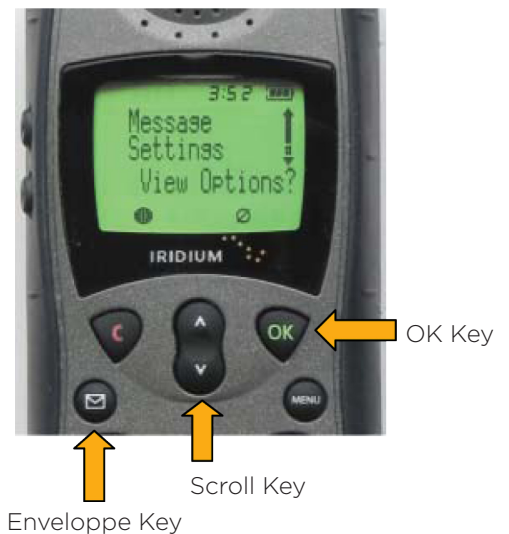

### Notes :

- a. This procedure needs to be performed once per SIM card because the number will be stored on the SIM.
- b. This procedure is valid only for Satellite Series 9505 handsets that have the current software version, which is LAC0307. To determine the software version of any 9505 handset, go to the initial screen and press \*#91#. The following software for 9505 handsets has been released in the past: LAC0103, LAC0105, LAC0107, and LAC109G (the most common version). 9505 handsets with older software can be reflashed by your Iridium service provider. Only one reflash is required; it is not necessary to incrementally reflash, i.e., reflash from LAC0107 to LAC109G then finally to LAC0307.
- c. Currently the Iridium SIM cards that support both mobile originated and mobile terminated SMS are those that have the following phone numbers:  
8816 214 xxxxx  
8816 310 xxxxx  
8816 314 xxxxx  
8816 317 xxxxx.

All other SIM cards continue to support mobile terminated SMS messages.

GEOLINK SATELLITE SERVICES



SeaMobile Europe – Geolink Satellite Services

+33 177 753 000 standard | +33 142 705 790 fax | 123 Rue Jules Guesde – 92300 Levallois-Perret